

SIMPLE MANUAL

RS201 Quick Guide

rose

English ver.

1. Safety Precautions

Warning

 
- Do not apply excessive force to the product, throw or give impact to the product using sharp objects.
- When used by children, a protector or a guardian should give guidance, and check if safety precautions are being followed.
- Use at the temperature range of 0°C - 40°C. Do not use in humid places. Use of product at temperatures under 0°C or in sealed places with high temperatures can lead to failure, corrosion, heat or ignition. Also, moisture or liquid can damage the surface and circuit.
- Always use adapters that are certified by ROSE. Other power adapters may cause malfunction or damage the product (degradation in performance).
- Do not spill waste or liquid on the product. This may damage the parts and circuit. If the product gets wet, contact the nearest service center without turning on the power. However, free aftersale repair service is not available in this case.
- Do not connect antennae or accessories, which are not certified by ROSE, and do not place the product on objects that can cause jamming.(steel desks, microwave, etc.)
- The product is sensitive to radio waves, and its performance can be degraded when used near steel objects or electromagnetic devices.

Caution

- The contents in the instruction manual are based on the default settings of the product.
- Instruction manual can be modified without notice to users for the improvement of the product's performance.
- Features and additional services of the product can vary by software and service providers.
- Data(Pictures, Music, Video Files, etc.) other than the default bell and pictures can be deleted due to carelessness of users or due to product failure and its repair works. ROSE is not liable for damages caused by data loss.
- If you use Bluetooth with 2.4Ghz wireless LAN together, WiFi connection may be slow or Bluetooth audio may not work properly due to signal interference. If you want to use them at the same time, it is recommended to use the wireless LAN connection in 5Ghz band.
- Do not use chemical solutions(alcohols, thinners, solvents, etc.) or detergents to clean the product. Rubbing the product using chemical solutions may generate heat and cause fire. Use a soft cloth or a towel for cleaning.
- Do not dismantle, modify, or repair the product at user's will. Free aftersale services will not be available in such cases. If a malfunction occurs, please contact a designated service center for repair.
- Only the programs provided by the manufacturer can be used. If a randomly generated file or a userdeployed file is transferred to the product, it may cause an operation error or cause serious damage to the product. ROSE is not liable for any issues stemming from such case.
- If the touchscreen is damaged, do not touch as it may cause injuries. Call service center for help.
- Due to software update and service provider, it may change features and additional services.

- 1 -

2. List of Component

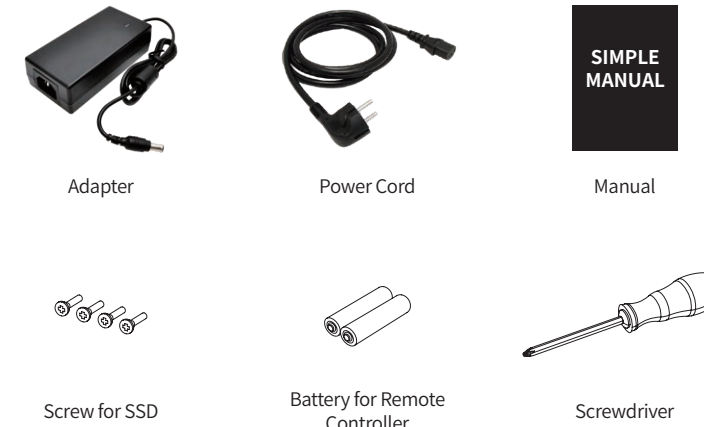


- 2 -

3. Button's Location and Function

Front Side



 Rear Side

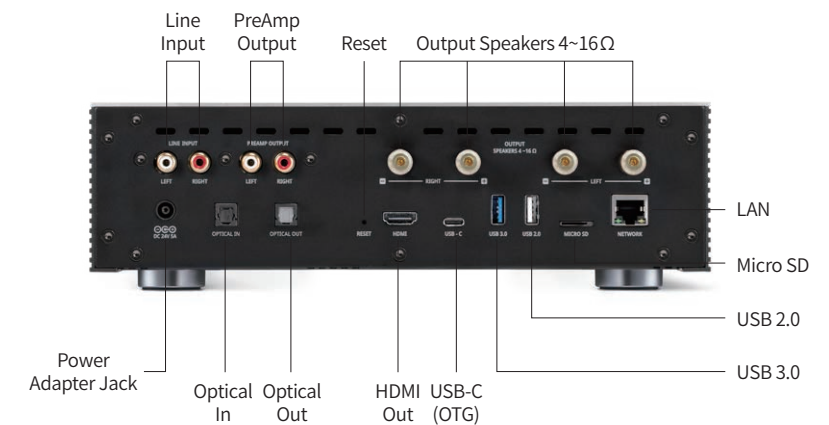


- 3 -

4. Connection and Operation

Connecting Power Adapter

 - Please follow the procedure below.

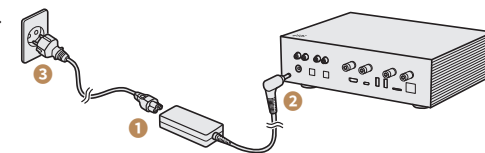

Power Button

- Turn ROSE on or off.
- Push power button in 3 seconds, ROSE shows 'Screen off', 'Power off' and 'Reboot'.

	LCD OFF	Playing sound on screen off status. When it is screen off, it will be screen on after push power button. ※ It is function which only turn off the screen.
	Power OFF	Power is off.
	Reboot	ROSE is reboot.

※ To cancel, touch any screen other menu.

- Push power button in 5 seconds, it would be reboot.
- Power button LED status : Screen on (LED OFF) / Screen off (LED ON)

Bluetooth Remote Controller Pairing

Push remote controller home() and option button() same time for 3 seconds ▶ BT Remote controller's red LED will light on ▶ Choose setting() ▶ BT setting ▶ BT switch on() ▶ Register new device ▶ Select 'ROSE RCU' from the list of available devices ▶ Pairing is completed when 'ROSE RCU' is selected from registered devices

※ Provided battery usage time is about 4 months but it depends on your usage patterns.
Due to battery discharging, it would be happen malfunction so change new battery.
※ To get to know button function and BT connection, please refer to the detail manual.

Inserting / Removing an External Memory Card

 
- An external Micro SD, USB, SSD are supported.
- MicroSD Card capacity is compatible up to 400GB, USB is up to 512GB and SSD is up to 4TB.

- 4 -

Inserting SSD

- Loosen bottom of screws(2ea) ▶
- Push OPEN indicator, separate SSD cover ▶
- Put SSD on the SSD cover ▶
- Fix SSD by screws in the box ▶
- Assemble the cover ▶
- Push LOCK indicator and tighten screws

※ SSD is optional, Only 7mm height is supported.

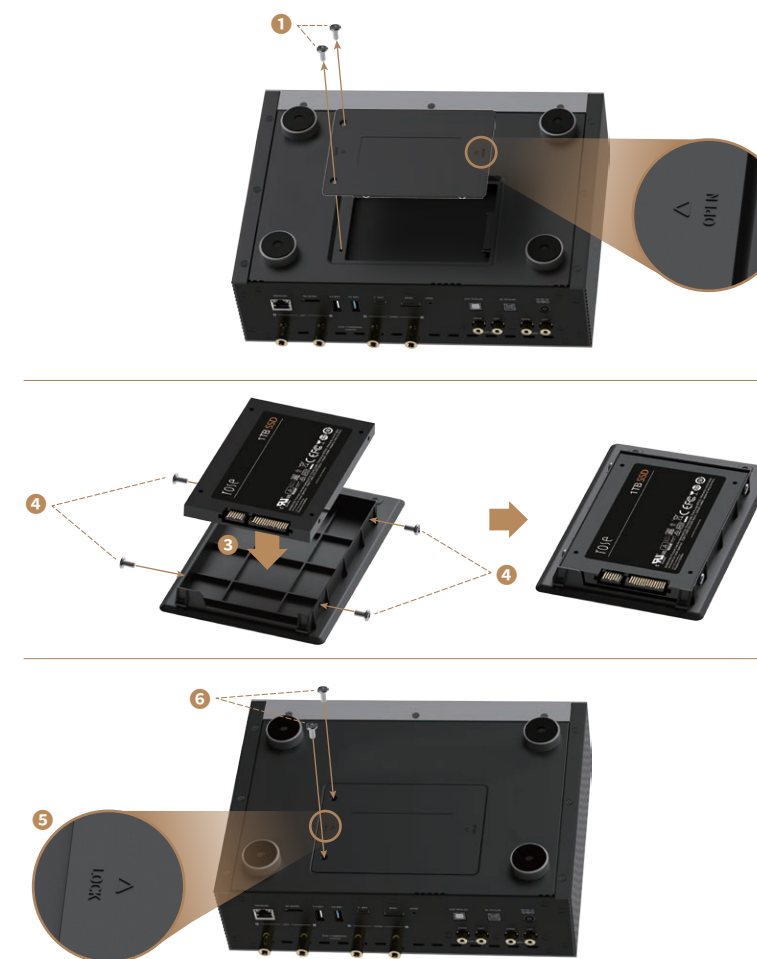


- 5 -

5. Home Screen and Menu Widget

Home Screen

 - Display icons. Move on to other menus by the left/right scrolling.

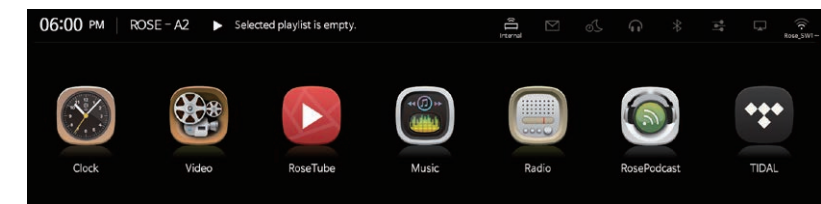

- Upper Bar : Displays the Time, Product ID(changeable), Playlist of music currently playing, External input(LOCAL, OPTICAL, LINE INPUT changeable), Displays Alarm, Sleep Timer, HeadSet, Bluetooth, DLNA, Airplay, WiFi or Ethernet Connection
- Menu Widget : Move on to other menus by the left/right scrolling

Icon of Menu

	Music	Play Music from Memory or Network.
	Radio	Listen to the Internet Radio.
	ROSE Tube	Enjoy YouTube contents without ads.
	ROSE Podcast	Enjoy Podcast contents.
	TIDAL	You can log in to Integrated TIDAL and play the music.
	CD Ripping	Rip or Play CD music using USB CD ROM.
	Video	Play Video from Memory or Network.
	Clock	Check time and set the Alarm. Check location to get weather information.
	Setting	Show RS201 information and edit setting.
	In/Out Setting	Input setting of LOCAL, OPTICAL, LINE IN and Output setting of Internal/External DAC and HDMI.
	ROSE Store	You can update ROSE Tube, TIDAL, ROSE Podcast App.

- 6 -

